

## Instructions:

Fill Jar ½ full with water and add contents of bait packet. Add 1 or 2 drops of dish soap. Knot one end of hanger and slide through hole in lid.

Hang trap securely away from eating areas and out of reach of children and pets. Traps can also be placed on the ground. Add protein bait like fish, cat food, hot dog or hamburger to increase catches.

Wash trap and replace bait when full or every two weeks. Use a new bait packet every time. Do not place trap in dishwasher. Bait works best in warmer weather.

Not recommended for indoor use.

